



CEILING MOUNTED LUMINAIRE INSTALLATION INSTRUCTIONS

GENERAL INSTALLATION

WARNING

To Reduce Risk Of Death, Injury Or Property Damage From Fire, Electric Shock And Other Hazards:

The service of equipment must be performed by qualified personnel.

Installation and maintenance must be performed by qualified personnel familiar with the construction and operation of this product and any hazards involved. All applicable local, state and federal codes and ordinances must be followed.

Read this document before installing, servicing, or maintaining this equipment. These instructions do not cover all installation, service, and maintenance situations. If your situation is not covered, or, if you do not understand these instructions or need additional information, contact American Linear Lighting or your local American Linear Lighting distributor.

WARNING

Before Installing, Servicing Or Maintaining This Equipment, Follow These General Precautions To Reduce The Risk Of Electrocutation:

Make sure the equipment is properly grounded.

Always de-energize the circuit and/or equipment before connecting to, disconnecting from or servicing the equipment.

To Prevent Luminaire Row From Over-Current:


By adding the input current of each luminaire section marked on the luminaire, the total current per power feed must not exceed the maximum line wire amperage rating in the luminaire and the power feed cord/wire amperage rating whichever is least.

CAUTION


It Is The Installers Responsibility To Ensure That Wall, Ceiling Or Junction Box Is Structurally Capable Of Supporting The Weight Of Luminaire/Luminaire Row.

NOTE: The fixture markings can be found on labels positioned behind the direct lens. To access these labels, carefully pry off the direct lens from one end of the fixture using a flat tool or plastic card.


2C DIRECT

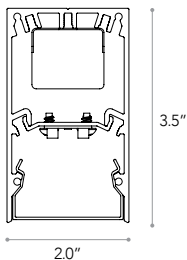


3C DIRECT

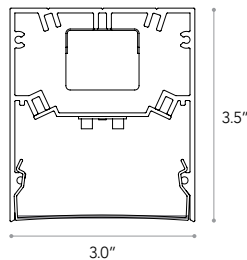

3C WALL WASH

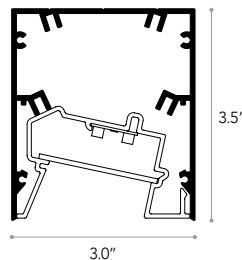

5C DIRECT

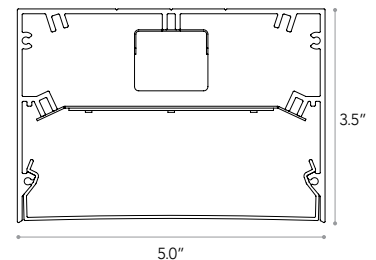

SAVE THESE INSTALLATION INSTRUCTIONS

CEILING MOUNTED LUMINAIRE INSTALLATION INSTRUCTIONS

INDIVIDUAL MOUNTING

INDIVIDUAL LUMINAIRE INSTALLATION

CAUTION


Ceiling Surface Mounting:

Linear luminaires intended for "Ceiling Surface Mounting" are to be installed with appropriate anchors "by others". The product mounting should be installed in accordance with these instructions and Local, State, and Federal regulations.

Step One:

Remove the lens and LED Reflector tray(s) and store safely aside. Use the fixture as a template to locate the mounting holes by centering fixture over recessed switch box, keeping box square to and on-center lengthwise, mark the appropriate quantity of mounting holes. (FIG. 1) The specified mounting location(s) can be found on page 5 of this document. Ensure that all mounting points are on the same centerline as the switch box installed. Please consult the factory or your ALL representative if you are not in possession of factory shop drawing. Use a drill to create suitable holes on the mounting surface for both the fixture and the fasteners that will be used. Securely attach the housing to the ceiling.

FIGURE 1

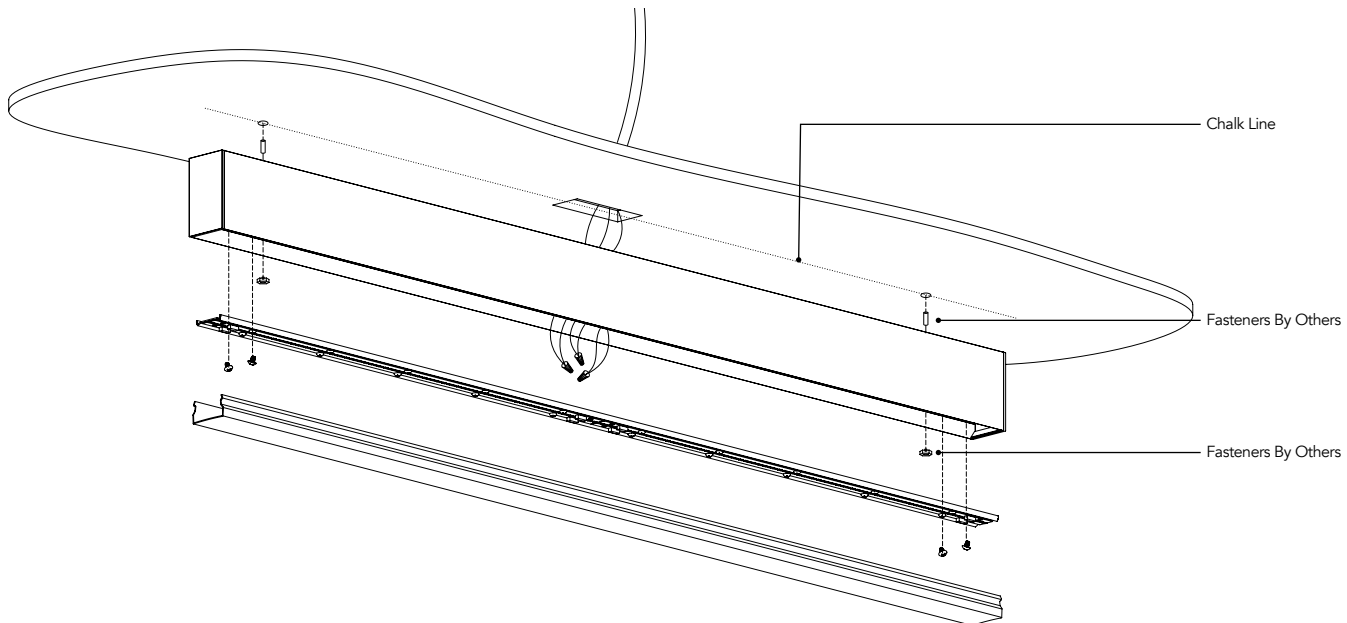

Step Two:


Make a wire connection as required to meet the intended function. Reassemble LED/Reflector tray in reverse fashion and ensure that there are no wires bound by the reflector as this will cause the lens to not fit correctly. For 2" wide product line only: When reinstalling the LED tray, hold it firm in the housing tracks, screw the first #18-8x1/4" screw with just a few revolutions, move to the middle, and to the last screw before screwing the first screw all the way in. Not following this step will cause the LED Tray to slide out of position and interfere with the end cap or the next tray in a row. Reinstall lens.

Wall Wash Lens Installation:

The Lift and Shift lens installation is done in 4 easy steps.

The textured side of the lens must point downwards.

1. Lift the lens into the housing towards the mounting screw.
- 2-3. Swing the lens into the housing aiming it towards the retaining groove and slide into the groove.
4. Allow the lens to rest on the surface opposite of the retaining groove.

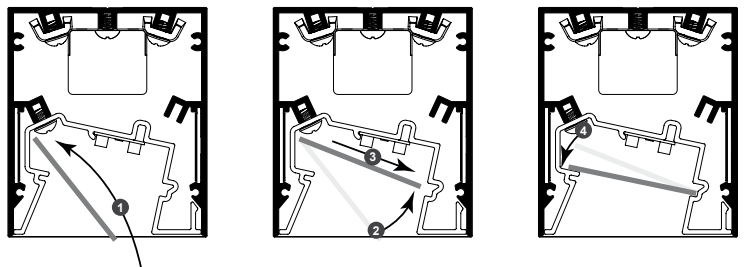

CEILING MOUNTED LUMINAIRE INSTALLATION INSTRUCTIONS

ROW MOUNTING

CONTINUOUS LUMINAIRE INSTALLATION

CAUTION

It Is The Installers Responsibility To Ensure That Wall, Ceiling Or Junction Box Is Structurally Capable Of Supporting The Weight Of Luminaire/Luminaire Row.

Attempt to assemble fixture rows on ground and lifting row into position may create stress at connection points and may result in damage and/or mechanical failure. It is best to perform the following tasks on a protective, elevated, stable surface to ease assembly and protect the fixtures. (Please also note this is to be done before attempting to mount the fixture run).

Ceiling Surface Mounting:

Linear luminaires intended for "Ceiling Surface Mounting" are to be installed with appropriate anchors "by others". The product mounting should be installed in accordance with these instructions and Local, State, and Federal regulations.

Step One:
From centerline of lengthwise mounted switch box(es), snap a lengthwise chalk line on the ceiling to the right of J-box approximately the full length of the row to be installed. Locate and install J-box to be centered on the right-most fixture within the row.

Step Two:
Joiner Kits (FIG. 2B). See the packing list for quantities per run.
Remove the lens and LED Reflector tray(s) and store safely aside.

Attach the Joiner Bracket with two #10 screws positioning it so that the Center Tension Screw is located 1/16" from the edge of the housing (towards the middle of the fixture). Joining fixture should mate easily leaving no gaps between housings. For 5" product family, two joining brackets are required, see figure 2B and 4C.

Repeat this process for the balance of the fixtures in the run as need.

FIGURE 2A


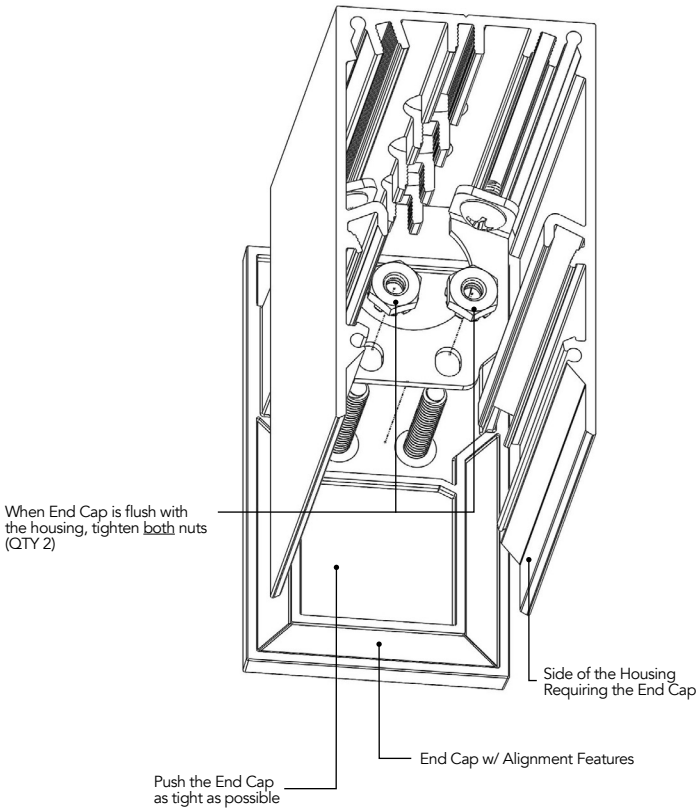



FIGURE 2B

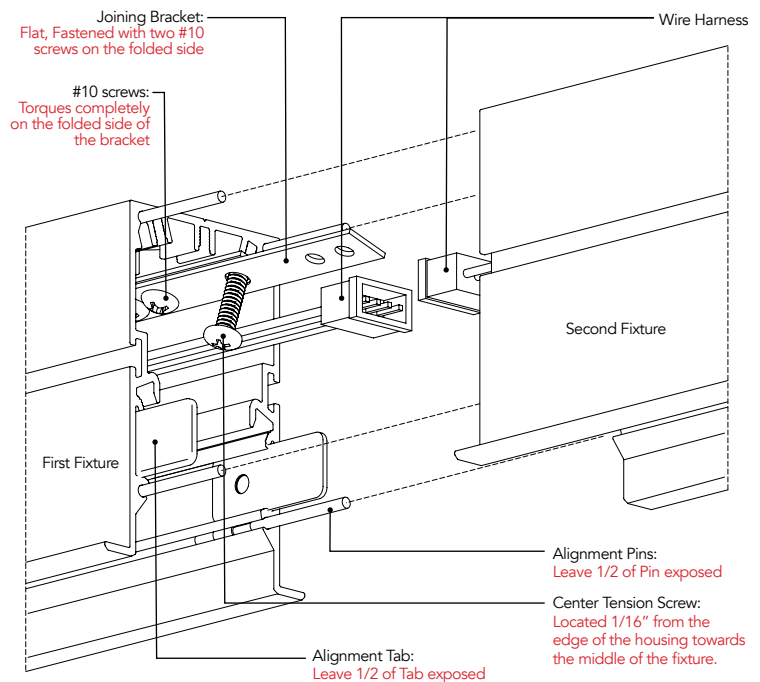

CEILING MOUNTED LUMINAIRE INSTALLATION INSTRUCTIONS

ROW MOUNTING

FIGURE 3

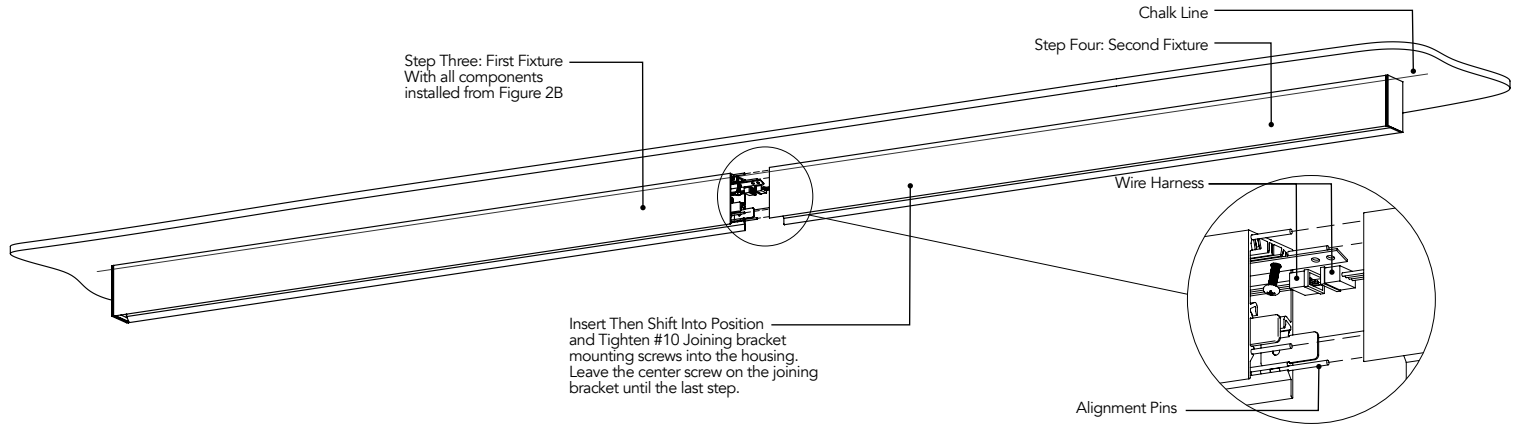

Step Three:

After determining and locating the suspension locations as shown at the end of this document "Row Information" and following the mounting instructions provided, attach the first fixture "STARTER Fixture" in the first fixture position in the row as shown. Tighten mounting screws on luminaire snug as to not allow luminaries to move when being aligned with next luminaire in a row at this time. (FIG. 3)

Step Four:

Position second fixture in a row (JOINER/INTERMEDIATE-ENDER) such that it aligns with the joint end of the first fixture as illustrated. (FIG.3) Make sure that all alignment hardware describes on Page 3 in (FIG. 2B) are installed. It is also important to assemble an entire row on a flat, leveled, and elevated surface prior to the final ceiling installation to make sure that all alignment points fit together.

Step Five:

Plug luminaire wire harness together and push the excess wire back into wire-way. Push luminaries tightly together while making sure the alignment pins and tabs slide into the interior tracks of each luminaire. When both ends of the fixtures are flush, tighten the ceiling hardware/anchors "by others". When both fixtures are secured to the ceiling, screw in two #10 screws through the joining bracket plate (FIG. 4A)

Step Six:

Continue to install and assemble row referencing steps 3 and 4.

Step Seven:

Once all luminaries in a row are installed, tighten the Center Tension Screw on the joining bracket on all fixtures enough to hold luminaries snug to the mounting surface (FIG. 4B). Joining brackets are designed for a single-use. Contact the factory for the additional joining kits. Make a wire connection as required to meet the intended function. Reassemble LED/Reflector tray in reverse fashion and ensure that there are no wires bound by the reflector as this will cause the lens to not fit correctly. For 2" wide product line only: When reinstalling the LED tray, hold it firm in the housing tracks, screw the first #8-18x1/4" screw with just a few revolutions, move to the middle, and to the last screw before screwing the first screw all the way in. Not following this step will cause the LED Tray to slide out of position and interfere with the end cap or the next fixture in a row.

Apply the Light Shield Tape below the joining tab. Do not let the bottom of the tape show below the edge of the housing. Reinstall lens(es) when all tape pieces are applied. Please refer to Page 2 for the Wall Wash lens installation.

FIGURE 4A Shown in a cross-section for clarity

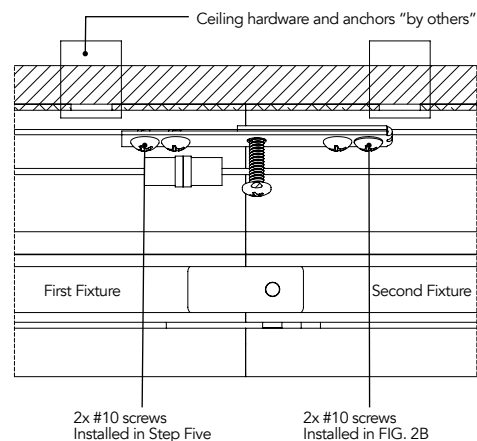


FIGURE 4B Shown in a cross-section for clarity


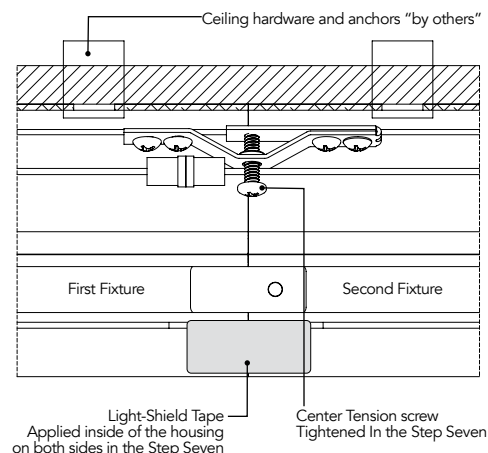



FIGURE 4C

Two joining brackets are required for 5" product family

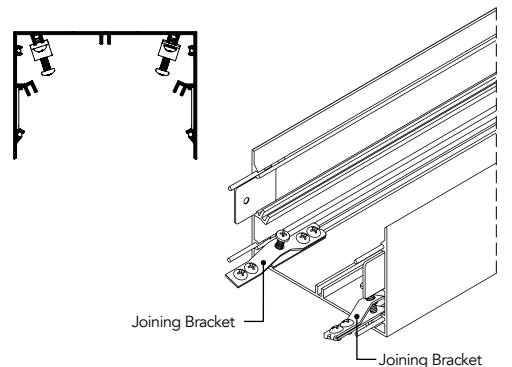


FIXTURE ROW LAYOUT: SINGLE UNIT 2' - 4' - 6' - 8' - 10' - 12'


2' FIXTURE

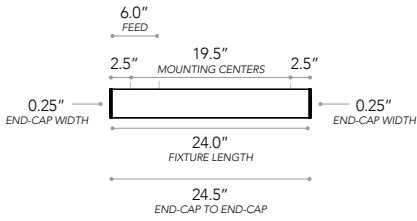


4' FIXTURE

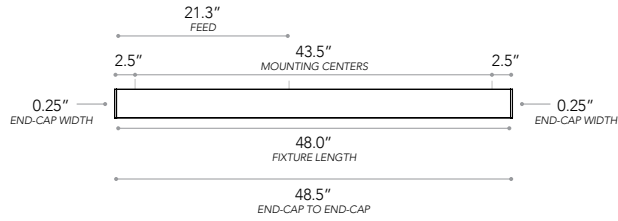


6' FIXTURE

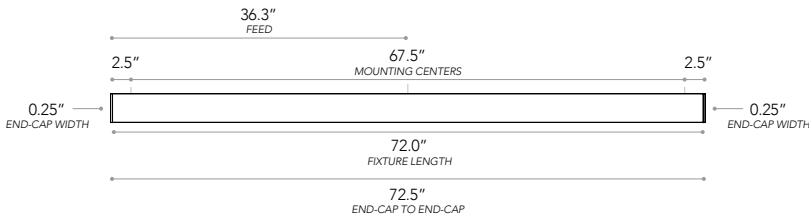


8' FIXTURE

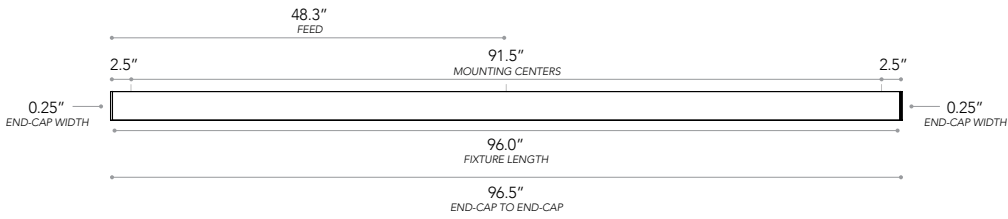

10' FIXTURE

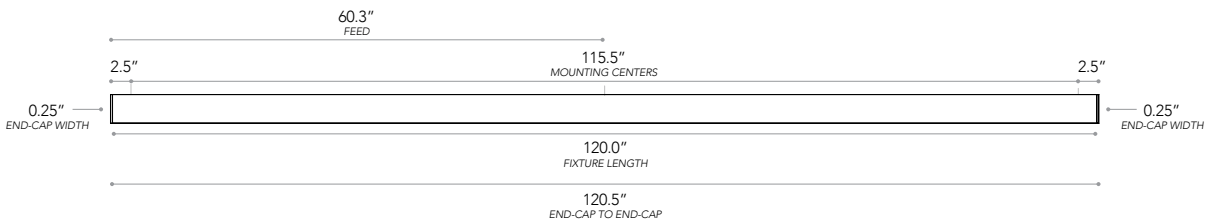


12' FIXTURE

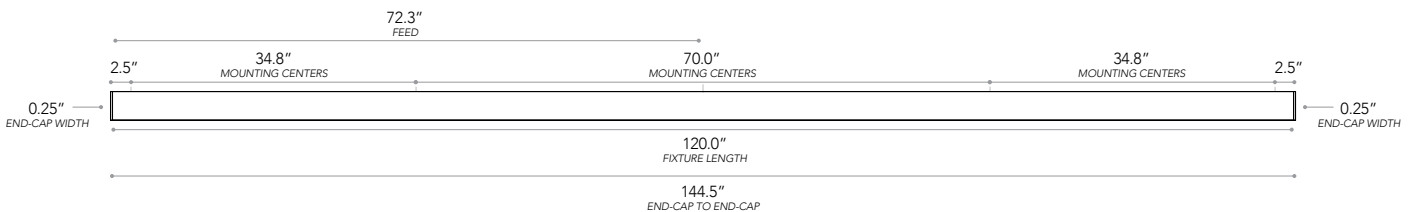


FIXTURE ROW LAYOUT: TWO UNITS 14' - 16'

14' FIXTURE

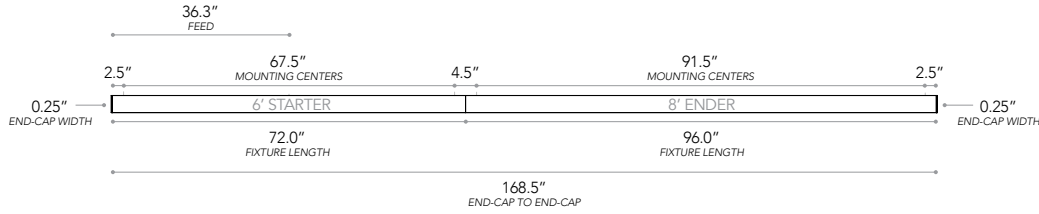


16' FIXTURE

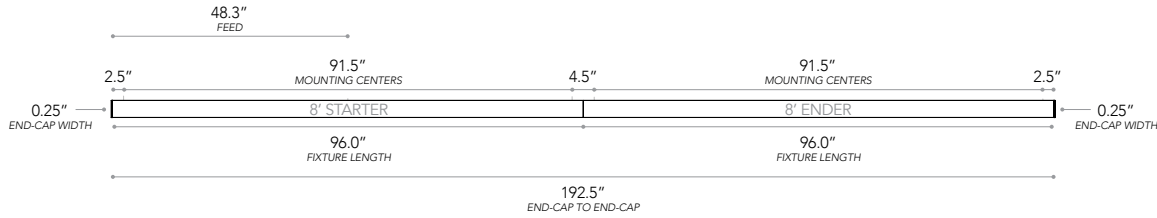


FIXTURE ROW LAYOUT: THREE UNITS 18' - 20' - 22' - 24'


18' FIXTURE

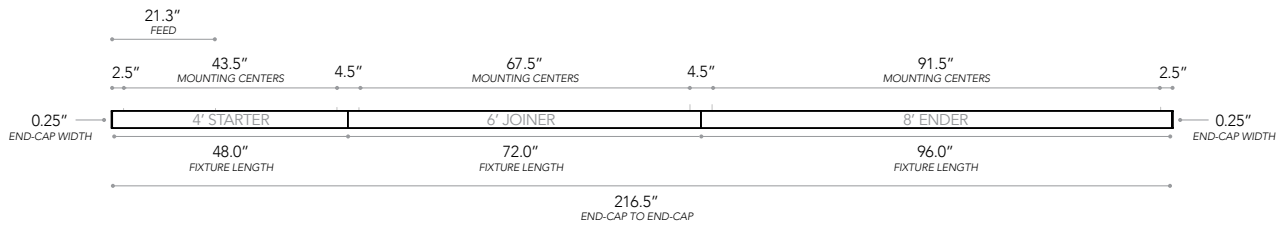


20' FIXTURE

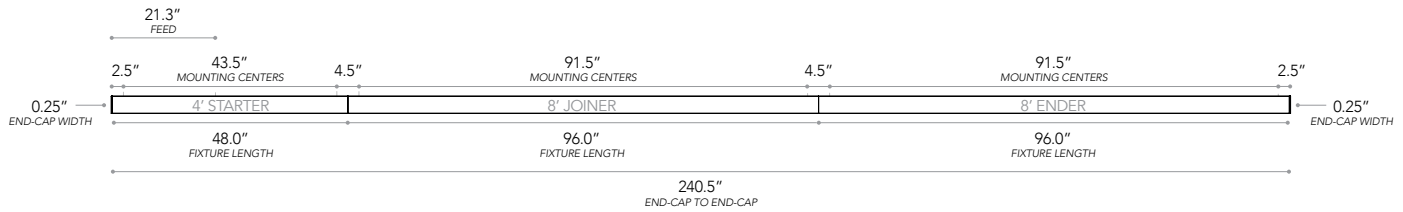

22' FIXTURE

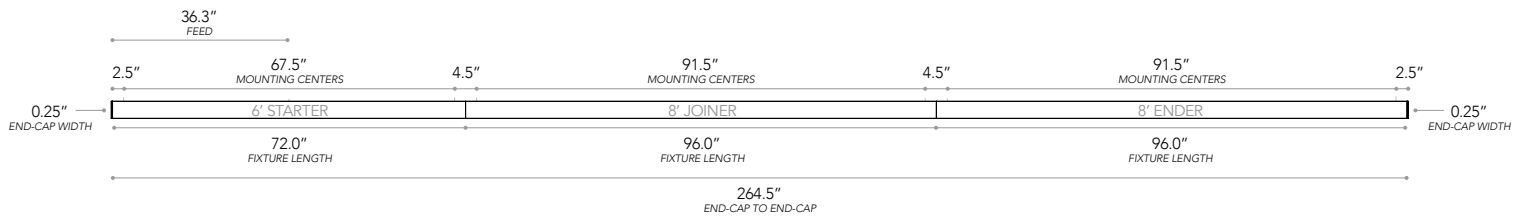

24' FIXTURE

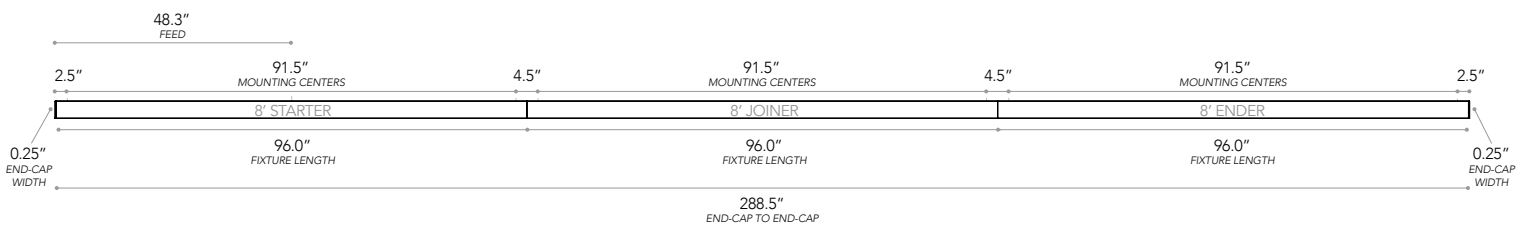

FIXTURE ROW COMPONENTS

RUN LENGTH (FT)	FIXTURE LENGTHS									JOINER KITS	END-CAPS	END-CAP TO END-CAP
	STARTER	JOINER										
	1	2	3	4	5	6	7	8	9			
14	6'	-	-	-	-	-	-	-	8'	1	2	168.5"
16	8'	-	-	-	-	-	-	-	8'	1	2	192.5"
18	4'	6'	-	-	-	-	-	-	8'	2	2	216.5"
20	4'	8'	-	-	-	-	-	-	8'	2	2	240.5"
22	6'	8'	-	-	-	-	-	-	8'	2	2	264.5"
24	8'	8'	-	-	-	-	-	-	8'	2	2	288.5"
26	4'	6'	8'	-	-	-	-	-	8'	3	2	312.5"
28	4'	8'	8'	-	-	-	-	-	8'	3	2	336.5"
30	6'	8'	8'	-	-	-	-	-	8'	3	2	360.5"
32	8'	8'	8'	-	-	-	-	-	8'	3	2	384.5"
34	4'	6'	8'	8'	-	-	-	-	8'	4	2	408.5"
36	4'	8'	8'	8'	-	-	-	-	8'	4	2	432.5"
38	6'	8'	8'	8'	-	-	-	-	8'	4	2	456.5"
40	8'	8'	8'	8'	-	-	-	-	8'	4	2	480.5"
42	4'	6'	8'	8'	8'	-	-	-	8'	5	2	504.5"
44	4'	8'	8'	8'	8'	-	-	-	8'	5	2	528.5"
46	6'	8'	8'	8'	8'	-	-	-	8'	5	2	552.5"
48	8'	8'	8'	8'	8'	-	-	-	8'	5	2	576.5"
50	4'	6'	8'	8'	8'	8'	-	-	8'	6	2	600.5"
52	4'	8'	8'	8'	8'	8'	-	-	8'	6	2	624.5"
54	6'	8'	8'	8'	8'	8'	-	-	8'	6	2	648.5"
56	8'	8'	8'	8'	8'	8'	-	-	8'	6	2	672.5"
58	4'	6'	8'	8'	8'	8'	8'	-	8'	7	2	696.5"
60	4'	8'	8'	8'	8'	8'	8'	-	8'	7	2	720.5"
62	6'	8'	8'	8'	8'	8'	8'	-	8'	7	2	744.5"
64	8'	8'	8'	8'	8'	8'	8'	-	8'	7	2	768.5"
66	4'	6'	8'	8'	8'	8'	8'	8'	8'	8	2	792.5"
68	4'	8'	8'	8'	8'	8'	8'	8'	8'	8	2	816.5"
70	6'	8'	8'	8'	8'	8'	8'	8'	8'	8	2	840.5"
72	8'	8'	8'	8'	8'	8'	8'	8'	8'	8	2	864.5"

FIXTURE LENGTH		
	STARTER	FEED DIMENSION
4'	48.0"	21.0"
6'	72.0"	36.0"
8'	96.0"	48.0"

